

RF Wireless LED Dimmer

09.28584.04342



- 4 zones/areas
- Press-button RGBW controller

Picture		Brief introduction of buttons	
		<p>Touch the slip to turn up/down the whole brightness</p> <p>Click to switch the 4 running mode: jump, flash, fade, strobe</p> <p>Color wheel</p> <p>Program the running colors: click the button, then touch the color wheel to choose 2-5 kinds of colors, then click this button again, the LED lights will run after the color chosen</p> <p>4 channels: click the channel button to turn on/off the corresponding channel, hold to turn up/down the channel's brightness</p> <p>4 zones: click the zone button to turn on/off the corresponding zone, hold to turn up/down the zone's brightness</p> <p>Save button: hold to save color/modes, click to call up the saved. Each zone can save up to 4 colors/modes</p> <p>Switch warm white/natural white/cool white mixed by RGB color</p> <p>Turn on/off</p> <p>Speed up/down</p>	
Operation Voltage	Operation Frequency	<p>Note : This remote controls 4 zones (areas) receiver, each zone can pair with countless receivers. 1 receiver can be paired by max 8 different remote controls.</p>	
4.5V	868MHz		
Size		Operation	
		<p>1. Pair with RF receivers:</p> <pre> graph LR A[Turn on RF remote] --> B[Click "Learning Key" on RF receiver] B --> C[Click a zone number on RF remote] C --> D[touch color wheel on RF remote, led lights flicker twice means well paired] </pre> <p>2. Play the remote after pairing:</p> <pre> graph LR A[Turn on RF remote] --> B[Click the paired zone number/numbers] B --> C[touch color wheel or other buttons to do the controlling.] </pre> <p>3. Save color/scene:</p> <pre> graph LR A[Turn on RF remote] --> B[Click the paired zone number/numbers] B --> C[select a color] C --> D[Hold S1/S2/S3/S4 until light flash twice] </pre> <p>5. Call up the saved: Select zone button which we want to called up , then click save button S1,S2,S3,S4.</p> <p>6. How to delete the pairing: Power on the RF receiver, hold the "Learning Key" over 3 seconds until connected led lights flicker twice means well deleted.</p>	